

Measuring Guide

PLEASE GIVE ACCURATE MEASUREMENTS
THE MAKERS ACCEPT NO RESPONSIBILITY FOR ERRORS IN MEASURING

Just read the easy to follow instructions below. Then use a steel tape measure. Not a cloth tape - they stretch. But take care, accurate sizes are essential.

Exact or recess?

You can choose to have your blind made to fit either on the inside of your window or on the outside.

Exact: This is the measurement you need to take if you want the blind to hang outside the window recess. We will make your blind exactly to these measurements.

Recess: This is the measurement you need to take if you want the blind to fit inside the window recess. We will make your blind to fit into the recess perfectly. There is no need for you to make any adjustments.

Recess Width


Take three (3) measurements for the width of the window recess as shown in the picture. Take the smallest of these measurements. This is the recess width.

We will make the necessary deductions for the fittings and brackets to ensure the blind operates perfectly within the window recess.

Recess Drop

Take three (3) measurements for the drop of the window recess as shown in the picture. Take the largest of the measurements. This is the recess drop.

This blind can be **TOP FIXED** to the top of the recess or **FACE FIXED** to the window frame if no handles are protruding out.

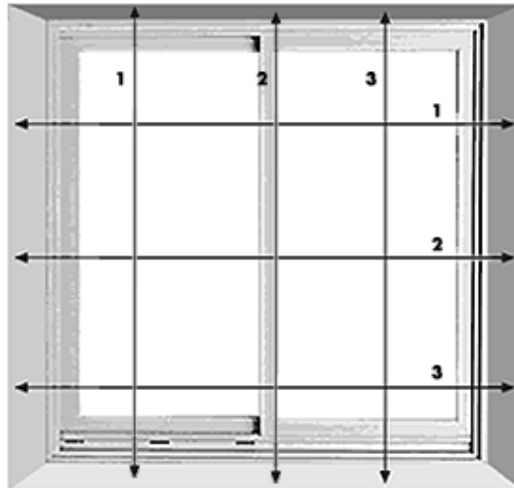

Exact

Decide how much you wish to overlap the recess at the top, bottom and sides. We recommend at least 75mm or 3 inches all around.

This will be the overall Blind Size including brackets.

This blind can be **FACE FIXED** onto the wall

